

|   |      |   |       |   |      |         |         |       |  |
|---|------|---|-------|---|------|---------|---------|-------|--|
| Airlock shaft - TOP Controller (TC) - Channel 2     |      |   |       |   |      |         |         |       |  |
| Luke's elevator - Bottom Controller(BC) - Channel 1 |      |   |       |   |      |         |         |       |  |
|   |      |   |       |   |      |         |         |       |  |
| <b>TC</b>   | Page | B | Enter | Settings are saved in memory                      |      |         |         |       |  |
| <b>BC</b>   | Page | A | Enter | Settings are not saved, make them the same as TC. |      |         |         |       |  |
|   |      |   |       | Tab   | .+/- | 2       | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | 5       | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | 496     | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | 2992    | Enter   |       |  |
|   |      |   |       |   |      |         |         |       |  |
| <b>TC</b>   | Page | 3 | Enter | Settings are saved in memory                      |      |         |         |       |  |
| <b>BC</b>   | Page | 3 | Enter | Settings are not saved, make them the same as TC. |      |         |         |       |  |
|   |      |   |       | Tab   | .+/- | 25      | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | 500     | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | 160     | Enter   |       |  |
|   |      |   |       |   |      |         |         |       |  |
| <b>TC</b>   | Page | 4 | Enter | Settings are saved in memory                      |      |         |         |       |  |
| <b>BC</b>   | Page | 4 | Enter | Settings are not saved, make them the same as TC. |      |         |         |       |  |
|   |      |   |       | Tab   | .+/- | SINE    | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | nSTP    | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | 100     | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | 10      | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | 3       | Enter   |       |  |
|   |      |   |       |   |      |         |         |       |  |
| <b>TC</b>   | Page | 5 | Enter | Settings are saved in memory                      |      |         |         |       |  |
| <b>BC</b>   | Page | 5 | Enter | Settings are not saved, make them the same as TC. |      |         |         |       |  |
|   |      |   |       | Tab   | .+/- | EXT     | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | .+/-    | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | 4       | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | number  | Enter   |       |  |
|   |      |   |       | Tab   | .+/- | Digital | Enter   |       |  |
|   |      |   |       |   |      |         |         |       |  |
| <b>TC</b>   | Page | C | Enter | Chassis   |      |         |         |       |  |
| <b>BC</b>   | Page | C | Enter | Chassis   |      |         | Normal  | Enter |  |
|   |      |   |       |   |      |         | Digital | Enter |  |