

## Newport Flash Lamp Power Supply Model 68826 reset procedure

If unable to set the energy level to the full span of 800 to 5000 mJ then a system reset is required.

1. power unit off.
2. power unit on with run function off.
3. set for frequency display.
4. set frequency down to 0.1 Hz.
5. set frequency up to 75 Hz.
6. set frequency to desired repetition rate.
7. now set energy to desired level.